The following features are available in this PDF document.





Click the title of a specific chapter on the Contents to jump to it

*Reading software such as Adobe Reader is needed to support the functions above.



SMOOTH 5

User Guide

Contents


	Product List Product List · · · · · · · · · · · · · · · · · · ·	1
•	Get to Know SMOOTH 5 Get to Know SMOOTH 5 · · · · · · · · · · · · · · · · · ·	3
	Battery and Charging Battery and Charging · · · · · · · · · · · · · · · · · · ·	4
	Mounting and Balancing Mounting the Phone	5
		_
		7
	Balancing · · · · · · · · · · · · · · · · · · ·	8
	How to Use the Gimbal	0
		9
	Gimbal Modes Description • • • • • • • • • • • • • • • • • • •	12
	Manual Reposition • • • • • • • • • • • • • • • • • • •	15
	Standby Mode • • • • • • • • • • • • • • • • • • •	15
	Packing · · · · · · · · · · · · · · · · · · ·	15
	How to Use the App	
		16
	How to Connect • • • • • • • • • • • • • • • • • • •	16
	App Features Description • • • • • • • • • • • • • • • • • • •	17
	Firmware Upgrade and Calibration	
	Firmware Upgrade • • • • • • • • • • • • • • • • • • •	18
	Calibration	20

Product Specifications																
Disclaimer and Warning Reading Tips · · · · ·																24
Warnings • • • • • •																24
Safe Operation Guidelines															٠	25
Warranty Card																
Warranty Period • • • • •	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	٠	27
Warranty Exclusions • • •	٠					٠	٠	٠	٠	٠	٠	٠	٠			27
Warranty Claim Procedure																27

■ Contact Card

Product List


Before using this product, please check carefully that all the following items are included in the product package. In case that any item is found missing, please contact ZHIYUN or your local selling agent.

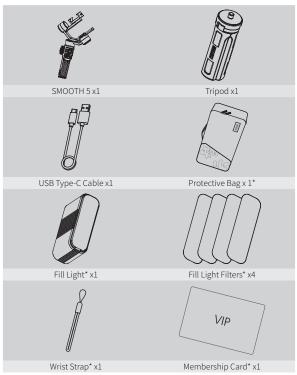



Items marked "**" are included in SMOOTH 5 COMBO.

Get to Know SMOOTH 5

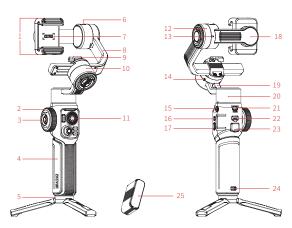


- 1. Magnetic Fill Light Slot
- 2. Focus/Zoom Control Wheel
- 3. Focus/Zoom Switch
- 4. Handle
- 5. Tripod
- 6. Mobile Phone Charging Port
- 7. Phone Clamp
- 8. Roll Axis Arm
- 9. Roll Axis Arm Latch
- 10. Roll Axis Motor
- 11. Indicator Lights/Control Panel
- 12. Tilt Axis Motor
- 13. Tilt Axis Lock Pin
- 14. Roll Axis Lock Pin

- 15. 1/4" Threaded Hole
- 16. Power Button
- 17. FN Button
- 18. Phone Clamp Rotate Axis
- 19. Pan Axis Arm
- 20. Pan Axis Motor
- 21. Pan Axis Latch
- 22. Type-C Charging/Firmware Upgrade Port
- 23. Trigger Button
- 24. Wrist Strap Hole
- 25. TransMount SMOOTH 5 Magnetic Fill Light (Included in SMOOTH 5 Combo)

Battery and Charging


SMOOTH 5 is equipped with built-in battery. When using SMOOTH 5 for the first time, please fully charge the battery to activate them and to ensure the proper function of the gimbal.

Charging method: Use provided USB Type-C cable to connect the USB charger (not provided, recommend chargers that meet the USB Power Delivery Specification, supports 18W at most) to the charging port of SMOOTH 5. When the indicator light stays solid, the charging is complete.

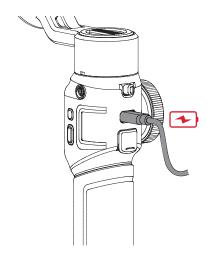

Mounting the Phone

1. Unlock the tilt axis, roll axis, and pan axis, expand the SMOOTH 5.

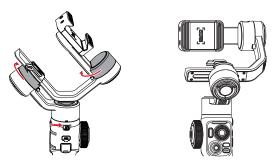

▲ When using, please rotate in the correct direction as shown in the image to prevent the lock pin from damaging.

Mount the mobile phone onto the phone clamp. You can mount the phone in portrait mode or landscape mode according to the actual filming scenario.






Portrait Mode Installation

Landscape Mode Installation

- 1. Rotate the phone clamp to switch between portrait/landscape mode. When using, please rotate in the correct direction.
 - When mounting the mobile phone, please note the installation direction of the phone cameras as shown in the image.
 - 3. When mounting the mobile phone, please make sure that the entire mobile phone is fixed in the phone clamp firmly.
 - 4. Before powering on SMOOTH 5, please mount the mobile phone and balance the gimbal.

Installing the Fill Light

If you purchase SMOOTH 5 Combo, the package will come with the magnetic fill light. Install the magnetic fill light at the front or rear camera according to the actual filming scenario and make sure a firm installation.

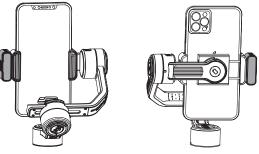

Fill Light at Front Camera

Fill Light at Rear Camera

Q You can change the fill light filter according to the actual filming scenario. When using the fill light, please avoid staring directly at the light.



Balancing

Mounting in the portrait mode

1. Unlock the roll axis arm ① , push the arm to move left or right ② until the phone is steady and is at almost level with the ground ③ . Tighten the latch ④ .



 Move the mobile phone left or right

 until the phone is steady and is at almost level with the ground ②.




Mounting in the landscape mode

1. Unlock the roll axis arm ① , push the arm to move left or right ② until the phone is steady and is at almost level with the ground ③ . Tighten the latch ④ .




2. Move the phone clamp forward or backward 1 until the phone is steady and is at almost level with the ground 2.

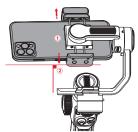

The balance state of the mobile phone will affect the gimbal runtime. The gimbal can work normally if unbalanced, but it will consume more battery power and weaken the motor strength.

Buttons/Indicator Lights/Ports Introduction

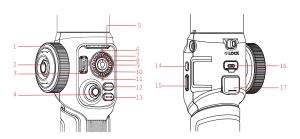



Focus/Zoom Control Wheel

Rotate the control wheel to control focus/zoom in ZY Cami app.



Focus/Zoom Switch

Single press: Switch between focus/zoom in ZY Cami app.



MENU Button

Single press: Enter shortcut menu in ZY Cami app. Double press: Return to previous menu in ZY Cami app.



Joystick

Push the joystick up/down/left/right to control the gimbal to rotate.



Gimbal Mode/Battery Level/Status Indicator Light

Gimbal Mode: Indicator light of each mode stays on to indicate the current mode. (F light flashes indicating the Go mode) Battery Level (single press the gimbal power button when powered on): flashing red PF light indicates low battery.

One flashing white indicator light: 0-20% battery level. Two flashing white indicator lights: 20%-40% Three flashing white indicator lights: 40%-60% Four flashing white indicator lights: 60%-80% Five flashing white indicator lights: 80%-100% Status: Five slow flashing light indicates standby. Five quick flashing light indicates upgrade failure. Five lights flashing one by one from left to right indicates that the upgrade is in progress.



Resolution/Frame Rate Selection Button

Single press: Scroll up in the menu in ZY Cami app.
Double press: Adjust resolution/frame rate in ZY Cami app.



Adjustment Wheel

In ZY Cami app, rotate the wheel to select filming mode.



Fill Light Button

Single press: For confirming when in parameter/function adjustment in ZY Cami app.

Double press: Take photo/film video in ZY Cami app.
Press and hold: Power on/off magnetic fill light. (Rotate the adjustment wheel to control the brightness when powered on)



ISO/Exposure Adjustment Button

Single press: Selecting the menu on the right in ZY Cami app. Double press: Adjust ISO or other exposure parameters (Can customize the exposure parameter in the app)



DISP Button

Single press: Selecting the menu on the left in ZY Cami app.
Double press: Show/hide filming parameters in ZY Cami app.
In Photo Album mode of ZY Cami app, press to
show detailed parameters of the photos.



Photo Album Button

Single press: Scroll down in the menu in ZY Cami app.
Double press: Enter the photo album to view photos or videos in ZY Cami app.

12

Mode Switch

Single press: Switch gimbal modes (PF-L-F-POV-V) Double press: Return to previous mode



Photo/Video Button

Single press: Take photo/film video in ZY Cami app.
Double press: Switch between front/rear camera in ZY Cami app.



Power Button

Single press: See battery level Press and hold: Power on/off the gimbal



FN Button

Single press: Customized setting (Can customize in the app)
Press five times: Reset Bluetooth



Type-C Charging/Firmware Upgrade Port

Charge the gimbal/connect to computer for firmware upgrade via this port.



Trigger Button


Single press: Enable/disable SmartFollow in ZY Cami app Double press: Reposition Triple press: 180° rotation for pan axis

Press and hold: Enter Go Mode

- ① When connected via Bluetooth, SMOOTH 5 is able to control the native phone camera without ZY Cami. This feature is available with a mobile phone which supports camera control using the volume button. Bluetooth connection with SMOOTH 5 doesn't require password.
 - ② Some of the functions above for the buttons are only available when the phone is connected to the gimbal and using "ZY Cami" app. It is recommended to download "ZY Cami" app and use it with SMOOTH 5.
 - ③ Some of the functions above for the buttons will be available in the later version of "ZY Cami" app.

Gimbal Modes Description

Single or double press the MODE button to switch modes.

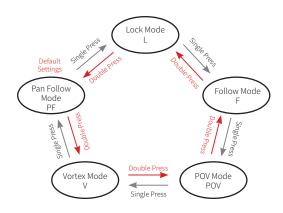

Motors circled in red will follow the movement of the gimbal, while motors circled in grey are locked.

Pan Follow Mode (PF):

The tilt and roll axis motors are locked and the pan axis follows the movement of the gimbal handle. Push the joystick up/down and left/right to control the tilt axis and pan axis.



Lock Mode (L):

The three motors are all locked and won't follow the movement of the gimbal handle. Push the joystick up/down and left/right to control the tilt axis and pan axis.



Follow Mode (F):

The roll axis motor is locked. The tilt axis and the pan axis motor follow the movement of the gimbal handle. Push the joystick up/down and left/right to control the tilt axis and pan axis.




Point of View Mode (POV):

The three motors all follow the movement of the gimbal handle.



Vortex mode (V):

The tilt axis motor rotates upward by 90°, and the tilt axis, roll axis, and pan axis motors follow the rotation of the handle. Push the joystick to the left/right to control the rotation of the pan axis.

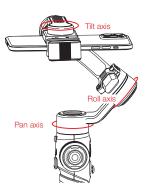


Go Mode (GO):

The camera pans and tilts following the movement of the gimbal at fast speed while the roll axis is locked.



Manual Reposition

In Pan Follow mode (PF) and Lock mode (L), the camera can be rotated by a certain angle by hand. Hold it for 2s and the camera angle will be fixed at that angle after you release the camera.

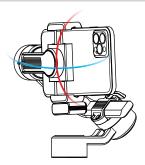


Standby Mode

When SMOOTH 5 is powered on, rotate the roll axis or pan axis manually until the axis triggers the built-in lock device, then SMOOTH 5 will enter standby mode automatically. Unlock the roll axis and pan axis to wake up the gimbal.

Packing

Rotate the gimbal to its storage state as shown in the image.

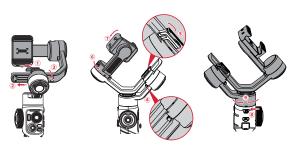

Download the App



Scan the QR code on the left (Android 7.0 and above, iOS 10.0 and above required) or search "ZY Cami" in App Store or Google Play to download.

- ☑ ① Users can make better use of the various functions of SMOOTH 5 with the dedicated app "ZY Cami".
 - ② ZY Cami is subject to update. Please always refer to the latest version.

How to Connect

- 1. Power on SMOOTH 5 and turn on Bluetooth on the mobile phone.
- Launch the "ZY Cami" app. Tap the camera icon in the upper left corner of the home screen to open the device list and select the SMOOTH 5 device you wish to connect (the SMOOTH 5 Bluetooth name can be checked on the tilt axis arm USER ID: XXXX).
- Activation on the ZY Cami app is required if the SMOOTH 5 is being used for the
 first time. Internet connection is required. After the activation succeeds, you
 can enter the camera interface of ZY Cami App.












For more details of the "ZY Cami" app features, please visit the official website of ZHIYUN (www.zhiyun-tech.com) and watch SMOOTH 5 video tutorials.

Firmware Upgrade

Method 1:

 - Connect the Type-C charging/firmware upgrade port at the side of the SMOOTH 5 vertical arm to the computer with the USB Type-C USB cable, power on SMOOTH 5, and enter standby mode.
- Visit the official website of ZHIYUN (www.zhiyun-tech.com), go to the SMOOTH 5 product page, click "Download", find the USB driver, the ZHIYUN calibration upgrade tool, and the firmware and download. (USB drivers are not required for Mac OS systems)
- 3. Install the driver and the software, unzip the firmware for the documents with the ".pt" file extension.
- 4. Open "Zhiyun Gimbal Tools", select the corresponding port, click "Open", click "Firmware Upgrade". Click "Browse" under "Path" to select the latest firmware downloaded (with the ".ptz" file extension), and click "Upgrade" at the bottom to upgrade firmware. When the firmware upgrade finishes, SMOOTH 5 will be automatically turned off.













Method 2:

Connect SMOOTH 5 to the "ZY Cami" app. If "ZY Cami" app prompts to upgrade the firmware, follow the instructions to upgrade. Internet connection is required.

Before upgrading the firmware, please ensure that the SMOOTH 5 has more than 50% power remaining. Do not exit the app interface or access in the background during the upgrading process. Pay attention to the prompts on the app.

Calibration

	Calibration Reason	How to calibrate			
1.	A slight deviation is found in the tilt angle of the mobile phone in level position after power-on.				
2.	A slight deviation is found in the roll angle of the mobile phone in level position after power-on.	Gimbal auto- calibration			
3.	Frequent small angle correction is found when the mobile phone is in a level position when the gimbal stays still.				
1.	A slight deviation is found in the level position after the autocalibration of the gimbal.				
2.	The gimbal has not been used for a long time.	Six-side calibration			
3.	The gimbal has undergone a significant temperature difference.	Calibration			

Six-side calibration:


- 1. Install SMOOTH 5 onto the tripod and connect to the ZY Cami App.
- Go to the settings of the app and select "auto-calibration". The SMOOTH 5 will enter the calibration automatically. You can check the progress at the prompt of the app.




Six-side calibration:

You can use "Zhiyun Gimbal Tools" to perform six-side calibration for SMOOTH 5.

- Connect the charging/firmware upgrade port of the gimbal to the computer with the Type-C USB cable. Power on the gimbal and enter standby mode.
- Open "Zhiyun Gimbal Tools", click "open" on the top, and click "calibration" on the bottom. Please conduct the process according to the following steps. A "√" mark will appear after the calibration is complete.

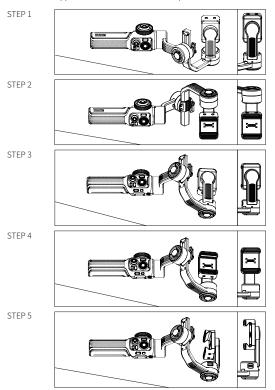

 STEP 6



Please refer to the six-side calibration steps above. In simple terms, six-side calibration is to place all six sides of the tilt axis in vertical to a level surface respectively.

Product Model: SM115

	Min.	Standard	Max.	Remark
Operation Voltage	6.5V	7.4V	8.4V	
Operation Current	70mA	-	3000mA	
Charging Voltage	5V		9V	
Charging Current	-		1600mA	
Output Voltage	-	5V	-	
Output Current	-	-	1A	
Built-in Battery Capacity	-	2600mAh	-	
Following Deviation in Static State	± 0.01°		± 0.04°	
Following Deviation in Motion \pm 0.0 State		± 0.1°	± 0.3°	
Tilt Mechanical Range	-140°	349°	209°	Including storage state
Roll Mechanical Range	-90°	300°	210°	Including storage state
Pan Mechanical Range	-180°	360°	180°	
Controllable Tilt Angle	-90°	-	+170°	
Controllable Roll Angle	-50°	-	+50°	
Controllable Pan Angle	-180°	-	+180°	
Operation Temperature	-10°C	25°C	45°C	
Battery Runtime	4.5h	-	25h	Lab Data 1
Charging Time	2h	-	4h	Lab Data 2
Charging Ambient Temperature	0°C	25°C	45°C	
Compatible Smartph	none Weigh	t150g	-	300g

	Min.	Standard	Max.	Remark					
Horizontal Arm Adjustment Range	-12mm	47mm	35mm						
Mounting Clamp Supporting Range	50mm	-							
Compatible Models	Smartphones that their width is within the holder's capable width.								
Smartphone Thickness	.0mm								
Bluetooth Bluetooth 4.2									
EIRP									
Operation Frequency	2.402GHz~2.480GHz								

"Lab Data 1": The data is collected under the below conditions: a specified temperature of 25°C; the gimbal has been balanced and mounted with an iPhone XR. When the fill light is set at the highest brightness level, the runtime of the gimbal is 4.5h. When the fill light is off and the gimbal is under standby state, the runtime is 25h.

"Lab Data 2": When charging with a 15W Fast Charge at a specified temperature of 25°C , the charging time is 2h. When charging with a 5V/2A rated power adapter at a specified temperature of 25°C , the charging time is 4h. The actual charging time varies with environmental factors. In addition, the lower the temperature, the longer the charging time.

All the data in this guide is collected from internal experiments of ZHIYUN laboratories. Under different scenarios, the above data is subject to a margin of error. Please refer to actual use of this product.

Thank you for purchasing SMOOTH 5. The information contains herein affects vour safety, legitimate rights and obligation. Please read this instruction carefully to ensure proper configuration before use. Failure to read and follow this instruction and warnings herein may result in serious injury to you or bystanders, or damage to your device or property. Guilin Zhishen Information Technology Co., Ltd (hereinafter referred to as "ZHIYUN") reserves all rights for final explanation on this instruction and other documents related to SMOOTH 5. The information is subject to update without notice. Please visit www.zhiyun-tech.com to obtain the latest product information.

By using this product, you hereby signify that you have read this document carefully and that you understand and agree to abide by the terms and conditions herein. You agree that you are solely responsible for your own conduct while using this product, and for any consequences thereof. You agree to use this product only for purposes that are proper and in accordance with all terms, precautions, practices, policies and guidelines ZHIYUN has made and may make available.

ZHIYUN accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. Users shall observe safe and lawful practices including, but not limited to, those set forth herein.

ZHIYUN ™ is the trademark of Guilin Zhishen Information Technology Co., Ltd and its affiliates. All product names or trademarks referred to herein are trademarks or registered trademarks of their respective holders.

Reading Tips

Legends



Hints and Tips



Important

Warnings

Read the ENTIRE User Guide to become familiar with the features of this product before operating. Failure to operate the product correctly can result in damage to the product or personal property and cause serious injury. This is a sophisticated product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. DO NOT use with incompatible components or in any way otherwise as mentioned or instructed in the product documents provided by ZHIYUN. The safety guidelines herein contain instructions for safety, operation and maintenance. It is essential to read and follow all of the instructions and warnings in the User Guide, prior to assembly, setup or use, in order to operate the product correctly and avoid damage or serious injury.

Safe Operation Guidelines

WARNING:

- 1. Never allow the product to come into contact with any liquid. Never immerse the product in water or make it get wet. Never use the product in the rain or a humid environment. Corrosion reaction may occur when the interior of the product is exposed to water, which may cause the battery to ignite spontaneously and may even cause an explosion.
- If the product catches fire, please use water or water mist, sand, fire blanket, dry powder, carbon dioxide fire extinguisher immediately to put out the fire. Please choose the method according to the actual situation.
- 3. Please use the product in an environment with a temperature between -10° C and 45° C.
- 4. It is forbidden to disassemble the product in any way. If the battery is pierced during disassembly, it will cause the electrolyte inside the battery to leak or even cause fire or explosion.
- Mechanical impact, rolling, or throwing of the product is prohibited. Do not place heavy objects on the product.
- Do not heat the product. Do not place the product in a microwave oven or pressure cooker.
- 7. It is forbidden to place the product near a heat source (stove or heater, etc.) or inside the car in hot weather. Do not store the product in an environment above 45° C. The ideal temperature of storage is 22°C to 28° C.
- Do not store the battery for a long time after it is completely discharged to avoid the battery entering the over-discharged state and causing damage to the battery cell, and it will not be able to resume use.

BE CAREFUL:

- SMOOTH 5 is a high-precision control device. Damage may be caused to SMOOTH 5 if dropped or subject to external force, and this may result in malfunction.
- Make sure the rotation of the gimbal axes is not blocked by external force when SMOOTH 5 is turned on.
- SMOOTH 5 is not waterproof. Prevent contacts of any kind of liquid or cleaner with the SMOOTH 5. It is recommended to use dry cloth for cleaning.
- 4. Protect SMOOTH 5 from dust and sand during use.

CAUTION:

- 1. After the charging is complete, disconnect the product from the charger.
- 2. If you do not use the product for more than 10 days, please charge/discharge the battery to 40%-65% and store it to extend the battery life.

Disclaimer and Warning

- 3. Recharge and discharge every 3 months to keep the battery active.
- $\label{eq:smooth} 4. \ \mbox{Keep the handle stable when powering on the SMOOTH} \ 5. \ \mbox{Shakiness during} \\ \mbox{power-on may fail to start.}$

Warranty Period

- Customers are entitled to replacement or free repair service in case of quality deficits found in the product within 15 days upon receipt of the product.
- 2. Customers are entitled to free repair service from ZHIYUN for any product proven defective in material or workmanship that results in product failure during normal consumer usage and conditions within the valid warranty period, which is 12 months counting from the date of selling. However, warranty period varies by product component and country of purchase. Please contact our after-sales service team on ZHIYUN official website or your place of purchase for detailed warranty information.

Warranty Exclusions

- Products subjected to unauthorized repair, misuse, collision, neglect, mishandling, soaking, accident, and unauthorized alteration.
- Products subjected to improper use or whose labels or security tags have been torn off or altered.
- 3. Products whose warranty has expired.
- 4. Products damaged due to force majeure, such as fire, flood, lightning, etc.

Warranty Claim Procedure

- If failure or any problem occurs to your product after purchase, please contact a local agent for assistance, or you can always contact ZHIYUN's customer service through email at info@zhiyun-tech.com or website at www.zhiyuntech.com.
- Your local agent or ZHIYUN's customer service will guide you through the whole service procedure regarding any product issue or problem you have encountered. ZHIYUN reserves the right to reexamine damaged or returned products.

Customer Information	n								
Customer Name:		Phone Number:							
Address:									
Sales Information									
Sales date:		Product Serial Number:							
Distributor Name:									
Distributor's Contact Number:									
First Maintenance Rec	cord								
Service Date:		Repairman Signature:							
Cause of Problem:									
Service Result:	Solved	☐ Unsolved	☐ Refunded/Replaced						



Website



Weibo



Vimeo



Google+



Facebook (Zhiyun Support)



Facebook (Zhiyun Tech)



Youku



Youtube



Wechat



Instagram

Tel: +86 400 900 6868

USA Hotline: +1 808-319-6137,9:00-18:00 GMT-7,Mon-Fri

Europe Hotline: +49 (0) 61018132180,10:00-17:00 GMT+1,Mon-Fri

Web: www.zhiyun-tech.com E-mail: info@zhivun-tech.com

Address: 09 Huangtong Road, Tieshan Industrial Zone, Qixing District, Guilin,

541004, Guangxi, China



For full product information, please visit ZHIYUN's official website: Content on www.zhiyun-tech.com is subject to update without notice.

ZHIYUN ™ is a trademark of ZHISHEN

All product names or brands referred to hereunder may be trademarks or registered trademarks of their respective holders.

Copyright © 2021 ZHISHEN. All rights reserved.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

RF Exposure:

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

